Distributed by: ABQ Industrial LP USA

Tel: +1 (281) 516-9292 / (888) 275-5772 **eFax:** +1 (866) 234-0451 **Web:** https://www.abgindustrial.net **E-mail:** info@abgindustrial.net

SKIPPER 5 MOIS TURE METER



- SMM5 -

For Marine Surveying QUICK S TART GUIDE

OPERATION

- Press to switch ON/OFF
 Press to select the required mode/scale.
- Press fully against the surface of the material
- When using with the app, place and press the meter on the surface, record the reading, lift and repeat.
- Readings are instant and displayed on analog dial.



- Last scale used is memorized when power is shut down and automatically selected next time unit is powered up.
- Hold/freeze: Press once. In HOLD mode the Hold LED will flash continuously. Press again to release hold.
 (If powered down while on Hold, the Skipper 5 will retain information until powered up and hold is pressed again to release)
- Turn Audio signal on or off by pressing HOLD/AUDIO twice in quick succession.
- Automatic power timeout (5 mins) conserves battery life.



Distributed by: ABQ Industrial LP USA

Tel: +1 (281) 516-9292 / (888) 275-5772 **eFax:** +1 (866) 234-0451 **Web:** https://www.abgindustrial.net **E-mail:** info@abgindustrial.net

Distributed by: ABQ Industrial LP USA

Tel: +1 (281) 516-9292 / (888) 275-5772 **eFax:** +1 (866) 234-0451 **Web:** https://www.abgindustrial.net **E-mail:** info@abgindustrial.net

SCALES BLUETOOTH

 Upper scale (5-30) indicates moisture content (MC%) of wood when used on wood products.



• Lower Scale (0-100) is a comparative scale and may be used for recording and compar-ing moisture condition in materials other than wood.

DUAL-DEPTH PENETRATION

• Shallow depth up to 3/8" (10mm) Deep depth up to 11/4" (30mm)

MATERIALS AND SCALE SELECTION

- The Skipper 5 has 3 ranges of sensitivity:
 - Hardwood Shallow Depth
 - G.R.P.

Press to switch Bluetooth ON/OFF
 Readings will be sent to the Tramex App on your mobile device.

CALIBRATION & WARRANTY

- Obtain Warranty online: tramexmeters.com/register
- Annual calibrations are recommended as best practice.
 Calibration Check Boxes can be purchased for regular checks.

TROUBLESHOOTING

- All LEDs flashing when unit is powered up.
 - Batteries are low and will soon need to be replaced.
- Single LED flashing and meter frozen.
 - Skipper 5 is in HOLD mode.
 - Press HOLD button to release.

USER GUIDE ONLINE

Please use the following link or QR code to access the complete User Guide online: http://l.ead.me/bb30xw



Distributed by: ABQ Industrial LP USA

Tel: +1 (281) 516-9292 / (888) 275-5772 **eFax:** +1 (866) 234-0451 **Web:** https://www.abgindustrial.net **E-mail:** info@abgindustrial.net